

**MODEL: MSL-GB9908-B**  
**ELECTRONIC LOCK**  
**OPERATING INSTRUCTION**

**OPEN LOCK BY USER CODE**

{ DEFAULT USER CODE: 0 }

Input correct user code, then press the { OK } button.

The OPEN LOCK light will signal once, then turn the knob to the right.

**TO CLOSE THE SAFE**

Close the door of the safe, and then turn the knob to the left.

**CHANGE THE USER CODE** (User code can be 1 to 15 digits)

Input the current user code, then press the { C } button, then input your new code and press { OK }.

**IMPORTANT:** Test lock operation several times before closing the door.

**VALID CODE ENTRY / CHANGE:** The OPEN LOCK light will signal once.

**INVALID CODE ENTRY / CHANGE:** The OPEN LOCK light will signal twice.

**OVERRIDE CODE**

{ DEFAULT OEVERRIDE CODE: 888 }

The override code, when used, will change the user code back to the original default code of 0.

**USING THE OVERRIDE CODE**

Input correct override code, then press the { OK } button.

The OPEN LOCK light will signal once, and the user code is now set back to the original default code.

**CHANGE THE OVERRIDE CODE** (override code can be 1 to 15 digits)

Input the current user code, then press the { C } button twice, then input your new code and press { OK }.

**VALID CODE ENTRY / CHANGE:** The OPEN LOCK light will signal once.

**INVALID CODE ENTRY / CHANGE:** The OPEN LOCK light will signal twice.

**LOW BATTERY WARNING**

If the battery is low, the lock will signal three times after the correct user code has been entered.

**ALARM FEATURE**

If the incorrect code has been entered four consecutive times the alarm will sound.

If the lock is tampered with or struck, the alarm will sound.

**TO DISARM THE ALARM, ENTER THE CORRECT USER CODE.**