

MESA

SAFE COMPANY

"Better MESA SAFE than Sorry!"



**MSL-101 ELECTRONIC LOCK
OPERATING INSTRUCTIONS**

Dear Valued Customer:

Congratulations, on your choosing Mesa Safe to protect your valuables. You have made an excellent choice in your security measures. Mesa Safe Company has built a solid reputation on integrity and quality craftsmanship. We pride ourselves in having the best products in the industry and consistently exceeding costumers expectations.

Your Mesa Safe product comes with a support team and warranty in place that is second to none. We have the most qualified safe technicians throughout the country ready to assist you, should you have a problem with your unit.

Please visit www.mesasafe.com and see the diverse selection of products available to meet your security needs. Also read and understand the operating instructions of the unit. This will ensure maximum efficiency and usability. Thank you and congratulations for choosing Mesa Safe Company.

"Better MESA SAFE than Sorry!"

FACTORY DEFAULT CODE

User Code: *****

HOW TO OPEN YOUR SAFE

1. Enter * - User Code - #
2. Turn the handle clockwise while the LED is GREEN.

WRONG TRY PENALTY

- If an invalid code is entered 3 consecutive times this will put the lock in a 1 minute lock out state. You will not get any response from the keypad during this period.

OVERRIDE CODE (MASTER CODE)

- The override code is used only to place the "User Code" back to the factory default.
 - The override code is factory set to: *****
1. Enter * - Override Code - #
 2. Turn the handle clockwise while the LED is GREEN.
 3. The "User Code" is now set back to the factory default.

WE HIGHLY RECOMMEND THAT YOU CHANGE THE FACTORY SET OVERRIDE CODE.

HOW TO CHANGE THE USER & OVERRIDE CODE

IMPORTANT: PLEASE KEEP THE DOOR OPENED AND PLACE IN THE LOCKED POSITION WHEN CHANGING THE USER CODE. AFTER CHANGING THE USER CODE PLEASE TEST THE NEW CODE SEVERAL TIMES.

- The User & Master Code can be set to a 1 to 12 digit code.
1. Enter # - EXISTING CODE - #
 2. The LED is now ORANGE for 10 seconds.
 3. Enter NEW code then press #
 4. The LED is now ORANGE for 10 seconds.
 5. Re-enter the NEW code then press #
 6. If a mistake is made wait 15 seconds and repeat steps 1-5.

PROGRAMMING TIME DELAY

- The time delay can be set for a period of 1-99 minutes. Delays opening and programming.

SETTING TIME DELAY

1. Enter # - Master Code - #
2. The LED is now orange for 10 seconds.
3. Enter * - (01-99) - # - (01-99) - #
4. * or # will initiate the Time Delay.
5. The LED will signal once every 2 seconds indicating that the lock is in the delay period.
6. After the time delay period, a 2 minute window is given to enter code.
7. The LED will signal twice every second during the two minute window.

DE-ACTIVATE TIME DELAY

1. Enter # - Master Code - #
2. The "Set" LED is now orange for 20 seconds.
3. Enter * - 00 - # - 00 - #

LOW BATTERY WARNING

- The LED light turns RED during an opening indicates that the battery is low and needs immediate replacement.
- Uses one 9-volt alkaline battery..


If batteries are depleted and will not allow lock to open, simply follow the instructions below. Lock contains a non-volatile memory, even with batteries removed the lock will retain all programming.

CHANGING YOUR BATTERY

1. Locate the battery cover on the bottom edge of the keypad and remove the cover by pulling on the tab.
2. Carefully remove the 9-volt battery from the compartment.

CAUTION! Hold onto battery connector to avoid pulling wires out of housing.

3. Reinsert the new battery, do not force the battery into the compartment.

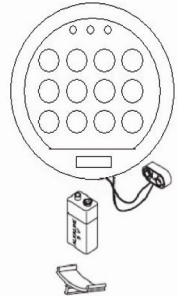

IF YOU ARE HAVING ANY ISSUES WITH YOUR ELECTRONIC LOCK, CHANGE YOUR BATTERIES FIRST BEFORE CONTACTING CUSTOMER SERVICE.

MESA
SAFE COMPANY

"Better MESA SAFE than Sorry!"

P.O. Box 52282

Irvine, CA. 92619

Phone: 714-891-8356 Fax: 714-891-8474

www.mesasafe.com

sales@mesasafe.com