



MSL-FD05 Electronic Lock Operating Instructions

The factory code is set to ***

You should have (2) keys, (4) Lag screws, and Batteries.

1. To open safe
 - A. Input Manager Code or Personal Code (Factory code is **).
 - B. Press “#”
 - C. You will hear 1 beep then the green light will turn on. (Light will stay on for 5 seconds then door will lock)
 - D. Pull knob to open door.
2. Lockout
 - A. If the wrong code is entered more than twice, your safe will go in to lockout mode. Your keypad will beep repeatedly for 20 seconds. You will have to wait for this to stop before trying your code again.
3. Changing your Manager Code (Always keep your safe door open until you confirm that your new code works)
 - A. Press “00” (zero twice with no pauses)
 - B. Then press the red button on the back of the door.
 - C. You will hear 3 beeps.
 - D. Now enter your new code. (Between 3 and 8 digits long)
 - E. Press “#”
 - F. You should hear 1 beep to confirm your code change.
4. Changing your Personal Code (Always keep your safe door open until you confirm that your new code works)
 - A. Press red button on the back of the door.
 - B. You will hear 2 beeps.
 - C. Now enter your new code. (Between 3 and 8 digits long)
 - D. Press “#”
 - E. You should hear 1 beep to confirm your code change.
5. Over Ride Key (Do not store keys inside the safe)
 - A. Remove key cover to expose keyhole.
 - B. Insert key and turn counter clockwise.
 - C. Pull knob to open door.
6. Low Battery
 - A. Both green and red light will stay on. Change batteries immediately.